



1510 Side Mounted Level Detector

General Instructions

The SOR® 1510 Level Detector mounts into the side of a vessel. Electric detecting action is provided by the float moving a magnet into the field of a hermetically sealed reed detector capsule.


The unit may be mounted for either high or low liquid level alarm by rotating the detector body to the proper position. The body wrench flats provide for ease of rotation and proper positioning. See decal on housing.

Before Installation of the Level Detector:

- Inspect the unit for any shipment damage.
- Check for mechanical clearance of the float. Float must move freely without binding throughout its stroke.
- Use an acceptable thread compound when installing unit to ensure a leak-free fit and to avoid thread galling.
- To achieve required function, install the unit according to the nameplate instructions shown here.



NOTE: If you suspect that a product is defective, contact the factory or the SOR Representative in your area for a return authorization number (RMA). This product should only be installed by trained and competent personnel.

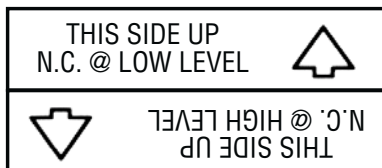

Nameplate Position
for Low Level Alarm



Nameplate Position
for High Level Alarm

**NC - indicates
circuit is closed**

*Design and
specifications are
subject to change
without notice.*

*For latest revision, go to
www.sorinc.net*

Table of Contents

Installation	2
Installation	3
Float Attachment	3
Dimensions	3
Electrical Connection	4
Special Conditions	4
Wiring for DPDT Relay	5
ATEX and IECEx Marking Details	6
Declaration of Conformity	7
Troubleshooting	8
Replacement Parts	8


Installation

The unit may be mounted in any of the following installation arrangements:

- 1-1/2" NPT half coupling (No full coupling).
- 2" NPT full coupling. (Use in conjunction with 2 x 1-1/2" NPT bushing as required.)
- 2" NPT pipe tee. (Use in conjunction with 2 x 1-1/2" NPT bushing as required.)
- Optional flanged mounting.
- Optional chamber mounting.

MD Remote Option (includes plunger, 20 foot cable and two crimps.)

- Screw plunger to the top of unit.
- Thread the 20' cable through the hole in plunger and create a 14 inch top loop as shown below.
- At the bottom of the cable, a second loop can be created as a handle for actuation at the desired length.

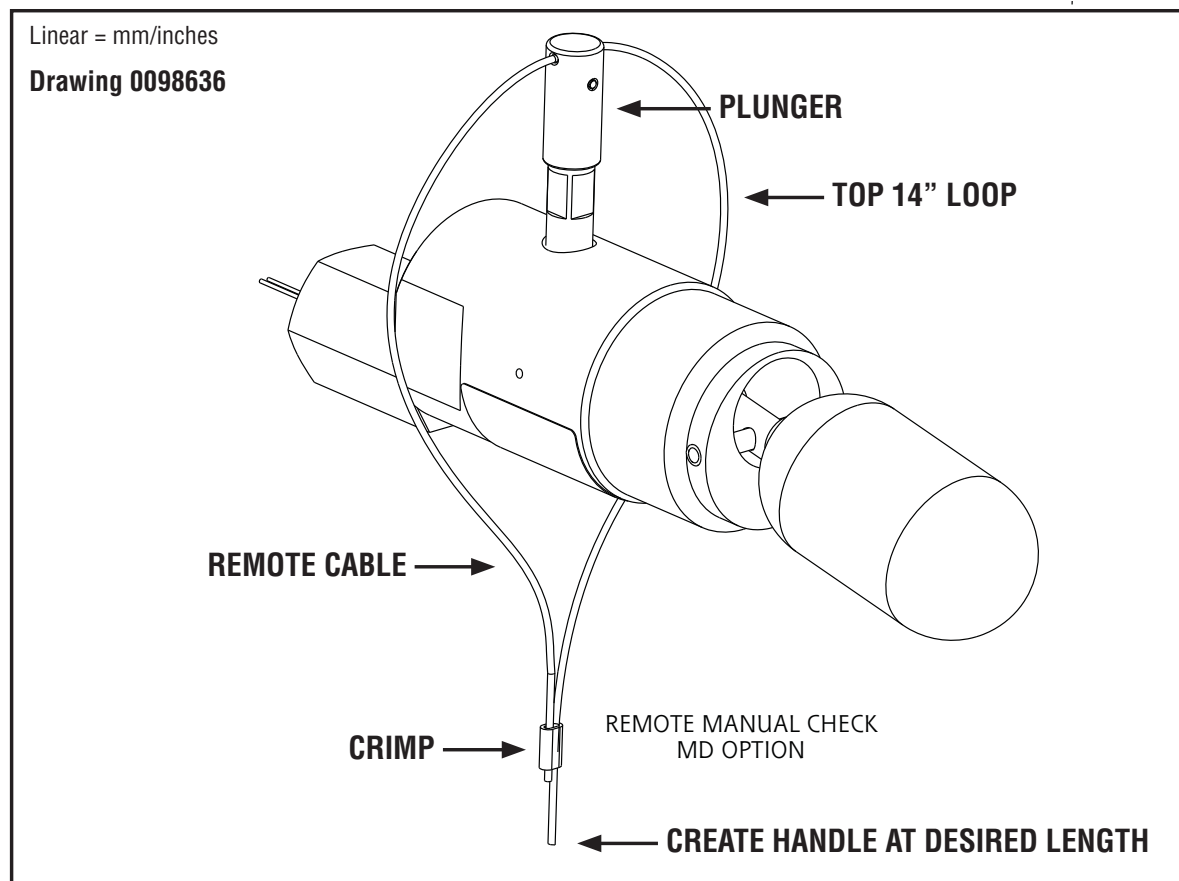

Safety Integrity Level (SIL) Installation Requirements

The SOR pressure detectors have been evaluated as Type-A safety related hardware. To meet the necessary installation requirements for the SIL system, the following information must be utilized:


- Proof Test Interval shall be one year.
- Units may only be installed for use in Low Demand Mode.
- Products have a HFT (Hardware Fault Tolerance) of 0, and were evaluated in a 1001 (one out of one) configuration.

Form 1538 (03.12) ©2012 SOR Inc.


Float Attachment (Series 1500 with Flange)

- 1 Place two drops of Loctite 271 inside the threaded hole of the float.
- 2 Thread the float onto the set screw and hand-tighten.

NOTE: Do not remove the set screw as it secures the pivot arm to the shaft.

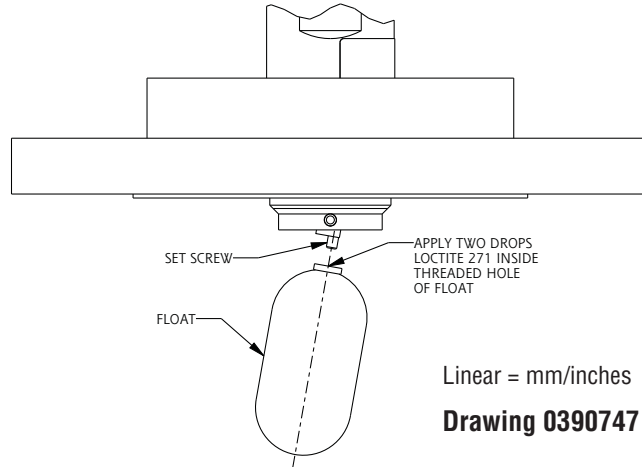


Dimensions

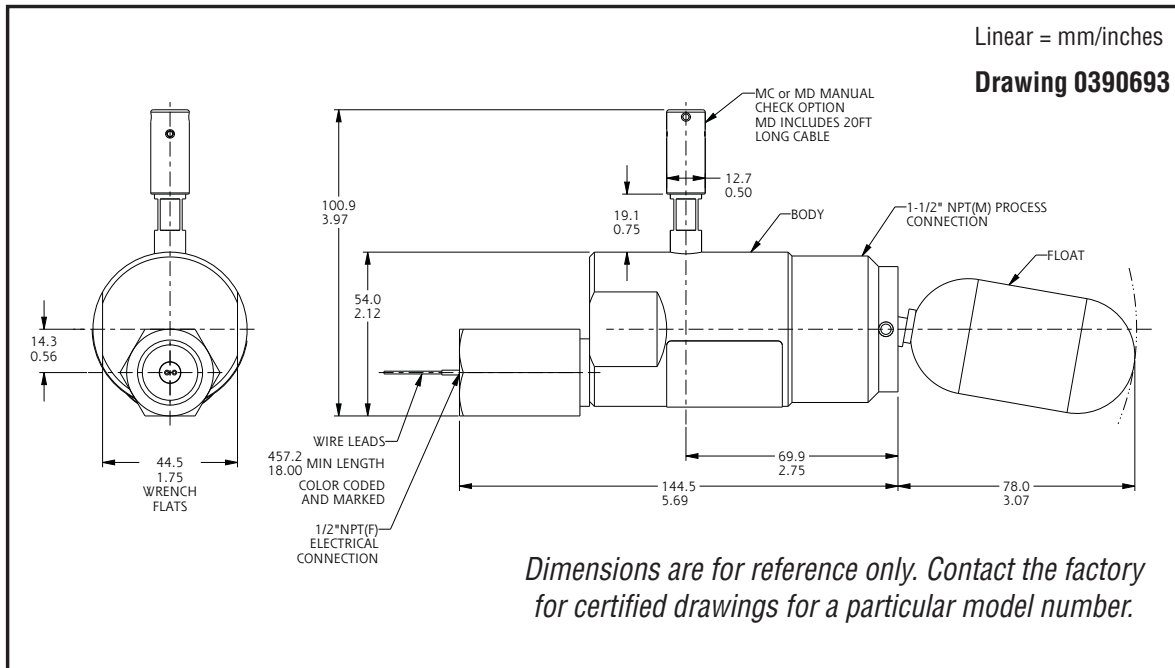

Electrical Connection

Ensure that the wiring conforms to all applicable local and national electrical codes and install unit(s) according to relevant national and local safety codes.

Electrical connection is free wire leads with a 1/2" NPT(F) conduit connection. Use two wrenches — one to hold the hex conduit connection, the other to tighten conduit fitting. Detecting element is a hermetically sealed reed detector.

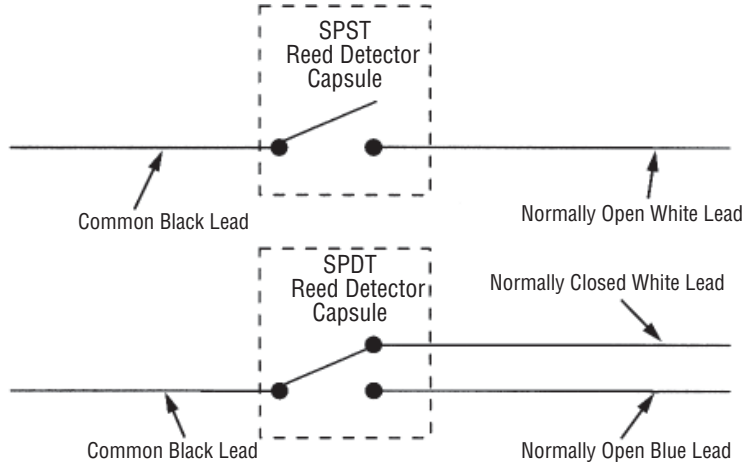



Do not exceed catalog stated electrical ratings. Improper current input to detector will cause permanent damage to contacts.

Special Conditions for Safe Use

The permanently attached leads must be suitably protected against mechanical damage and terminated in a suitable junction or terminal facility with a minimum degree of protection of at least IP20.0


Wiring for DPDT Relay

For Type 1510 Level Detectors equipped with DPDT relays, a wiring schematic and pin position schematic is shown below. When the 1510 is actuated, the coil will energize and “make” both NO1 and NO2 while it will “break” NC1 and NC2. This provides a DPDT circuit.

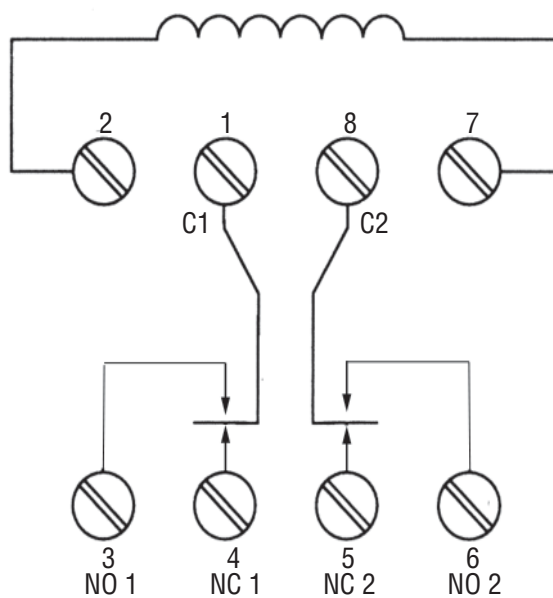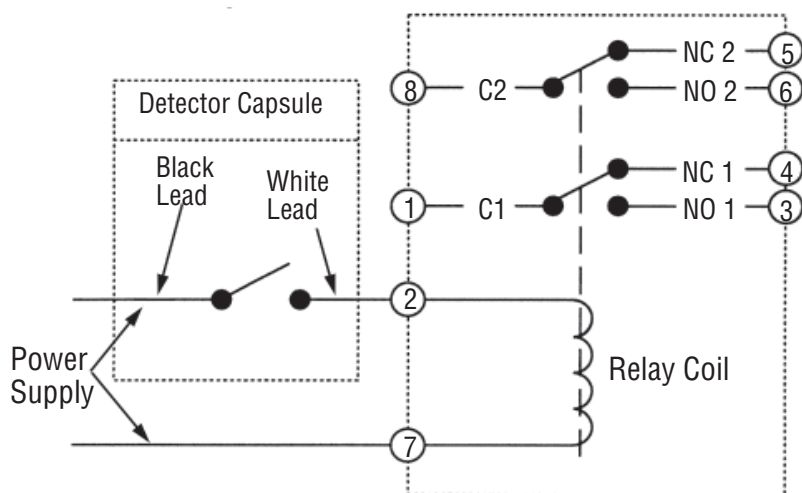

ATEX and IECEx Marking Details

For ATEX and IECEx Certified Models

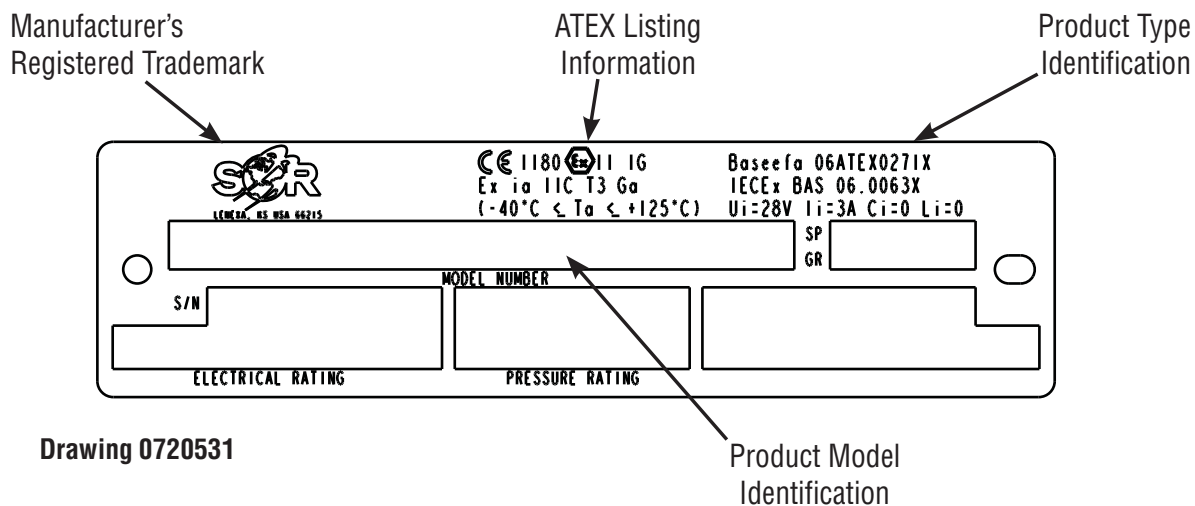

Drawing 0720531

Standards Assessed To: ATEX Certification: EN 60079-0: 2009 & EN 60079-11:2007
IECEx Certification: IEC 60079-0:2004 & IEC 60079-11: 1999

Declaration of Conformity

For ATEX Certified Models

EC Declaration of Conformity



Product Type 1500 Electric Detectors


Manufacturer SOR Inc.
14685 West 105th Street
Lenexa, Kansas 66215-2003
United States of America

Date of Issue November 12, 2012

**We declare that the above
products conform to
the following specifications
and directives**

ATEX Directive (94/9/EC) Equipment Intended for use
in Potentially Explosive Atmospheres
EN 60079-0: 2009 & EN 60079-11: 2007
IEC 60079-0: 2004 & IEC 60079-11: 1999

Carries the marking

 **II 1 G Ex ia IIC T3**
(-40°C ≤ Ta ≤ +125°C) or (-25°C ≤ Ta ≤ +125°C)
Ex ia IIC T3 (-40°C ≤ Ta ≤ +125°C)

Reference document

EC-Type Examination Certificate
Baseefa06ATEX0271X
IECEx BAS06.0063X
Issued January 12, 2007

ATEX Notified Body

Baseefa Ltd. (Notified Body No. 1180)
Rockhead Business Park, Staden Lane,
Buxton, Derbyshire SK17 9RZ
United Kingdom

Baseefa Customer Reference No. 1021

Persons responsible

John J. Fortino (VP of Engineering)


John J. Fortino

Engineered to Order with Off-the-Shelf Speed



14685 West 105th Street, Lenexa, KS 66215-2003
913-888-2630 • 800-676-6794 USA • 913-888-0767 FAX

Form 1385 (11.12) SOR Inc.

Troubleshooting

Symptom	Probable Cause
Float in actuated position but no output signal.	<ul style="list-style-type: none"> ■ No power supply. ■ Detector damaged. (Replace.)
Float in de-actuated position but still receiving an output signal.	<ul style="list-style-type: none"> ■ Detector damaged. (Replace.)
Control will not function when installed but operates when removed from process connection.	<ul style="list-style-type: none"> ■ Inadequate float travel. Float travel restricted by mounting nozzle. See Mounting Requirements.
Liquid in vessel at the actuation level but unit does not respond.	<ul style="list-style-type: none"> ■ Leaky or collapsed float. (Replace.) ■ Liquid specific gravity too low. ■ Float stem bound up or dirty. (Clean.)

Replacement Parts

Part Number	Description
3130-052	316SS Float Assembly
3130-091	W9 - SPST Hermetically Sealed Detector Capsule
3130-245	W1 - SPDT Hermetically Sealed Detector Capsule
3130-107	L9 - SPST Hermetically Sealed Detector Capsule
3130-244	L1 - SPDT Hermetically Sealed Detector Capsule
9227-028	MC Manual Check Assembly for 1 1/2" NPT Body*
9227-029	MD Manual Check Assembly for 1 1/2" NPT Body*
9227-024	MC Manual Check Assembly for 2" NPT Body*
9227-025	MD Manual Check Assembly for 2" NPT Body*
3130-040	20' Remote Cable with two cable crimps, for use with MC or MD accessory only.

* Unit must have originally been supplied with MC or MD option.



Printed in USA

www.sorinc.net

14685 West 105th Street, Lenexa, KS 66215 ■ 913-888-2630 ■ 800-676-6794 USA ■ Fax 913-888-0767