



805PT Pressure Transmitter

General Instructions

These instructions provide information for installation, process connection, electrical connection, operation and maintenance of 805PT Pressure Transmitters. The 805PT Pressure Transmitter consists of a field proven sputtered thin film stainless steel pressure transducer and a reliable electronic circuit. The housing features a stainless steel construction.

The 805PT is capable of powering long cable lengths. See Formula on page 3 for maximum loop resistance.

NOTE: If you suspect that an instrument is defective, contact the factory or the SOR® representative in your area for a return authorization number (RMA). This product should only be installed by trained and competent personnel.



Table of Contents

Design and specifications are subject to change without notice.

For latest revision, go to sorinc.com

Installation	1
Additional Install Steps for Dual Seal Units....	2
Electrical Termination - 805PT-C	3
Electrical Termination - 805PT-V	4
Operation.....	5
Dimensions	5
Maintenance	6
ATEX/IECEX Marking Details	6
Declaration of Conformity	7

Installation

Ensure that wiring conforms to all applicable local and national electrical codes and install unit(s) according to relevant national and local safety codes.

Normally, line mounting provides adequate support for the instrument.

1st Step: Make the Process Connection

- 1 The process connection is threaded onto a fitting within an adequately supported process piping system.
- 2 Use two open end wrenches when connecting the pressure port to a process piping system: one wrench to hold the process fitting, the other at the hex flat to tighten the pressure transmitter.
- 3 Process connection pipe or tubing may be rigid or flexible.

NOTE: Do not use the 1/2" NPT(M) connection on pressures higher than 5000 psi.

2nd Step: Make the Electrical Connection

- 1 The electrical connection may be installed on an adequately supported rigid conduit system. Use suitable locknuts (not provided) when mounting the instrument to an unthreaded (knockout) hole.
- 2 Securely connect the conduit pipe or fitting by holding the flats on the electrical connection while tightening.
- 3 Electrical connection may be rigid or flexible conduit.




Unit in Hazardous Locations - Prior to removal from service, make sure that the work area is declassified. Failure to do so could result in severe personal injury or substantial property damage.

Additional Install Steps for Dual Seal Units

Failure to follow these additional installation instructions may diminish the “Ingress Protection” and “NEMA” ratings of the “Dual Seal” instruments. An improper installation will void the warranty.


Vertical Installation

- 1 The figure on the right depicts the vertical installation profile; with the electrical leads on top. The instrument may be installed with the electrical leads on the bottom.
- 2 The nameplate (tag) should cover the set screw (annunciation path). Position the nameplate slot opposite the set screw; i.e., the nameplate slot should be located 180° from the set screw.

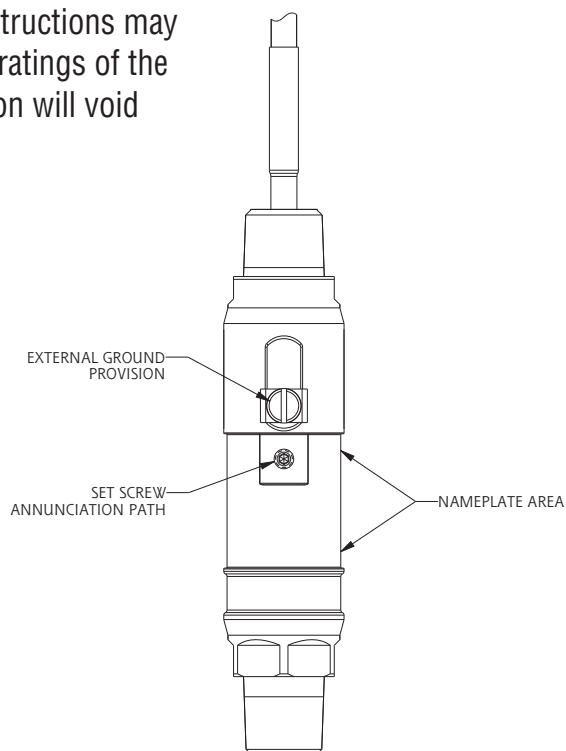


Horizontal Installation

- ❶ The following figure depicts the proper horizontal installation profile; with the external ground provision and set screw (annunciation path) oriented downward.
- ❷ The nameplate (tag) should not cover the set screw. Align the nameplate slot with the set screw; i.e., the set screw should be visible in the nameplate slot.

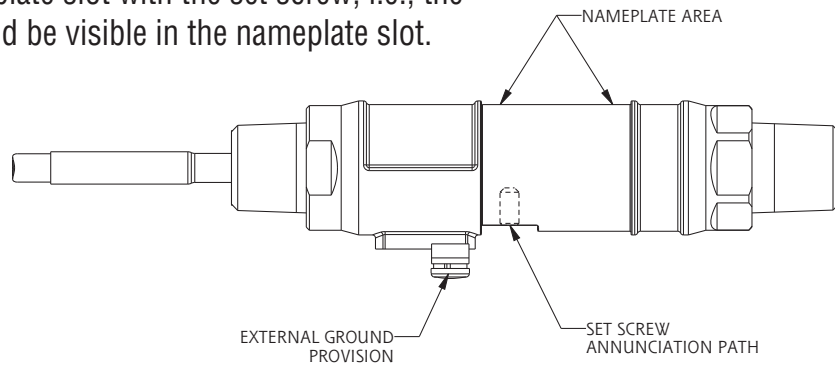

Electrical Termination - 805PT-C

Drawing 0190315

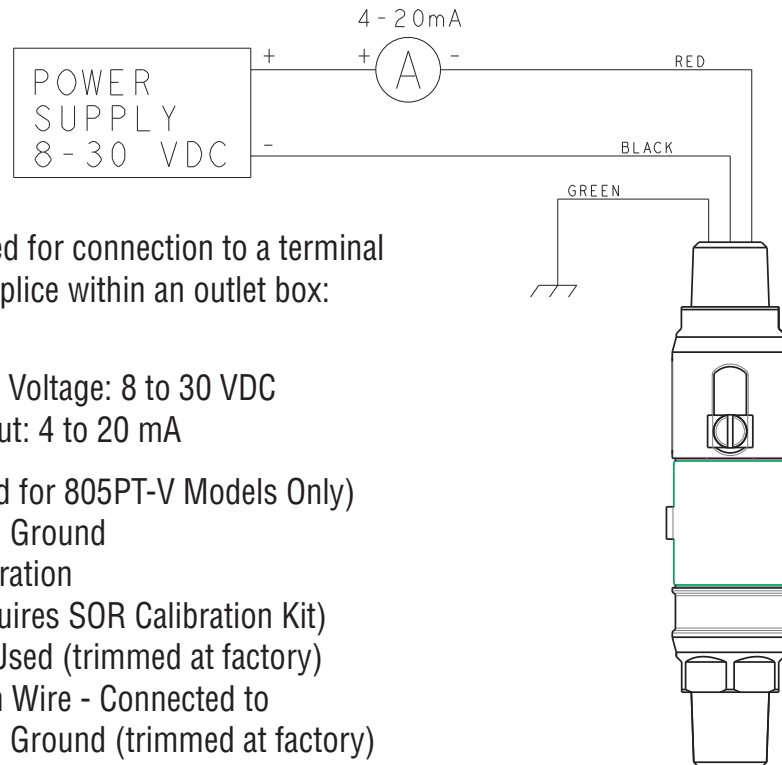

72" flying leads are provided for connection to a terminal strip within a cabinet or a splice within an outlet box:

Red (+)	} Loop Voltage: 8 to 30 VDC Output: 4 to 20 mA
Black (-)	
Blue	(Used for 805PT-V Models Only)
Green	Earth Ground
White	Calibration (Requires SOR Calibration Kit)
Brown	Not Used (trimmed at factory)
Bare	Drain Wire - Connected to Earth Ground (trimmed at factory)


NOTE: An external ground screw is included for additional earth ground connection.

**Formula for determining
maximum loop resistance**

$$R_L \text{ (MAX)} = \frac{V_{\text{Supply}} - 8V}{20\text{mA}}$$

Electrical Termination - 805PT-V

Drawing 0190315

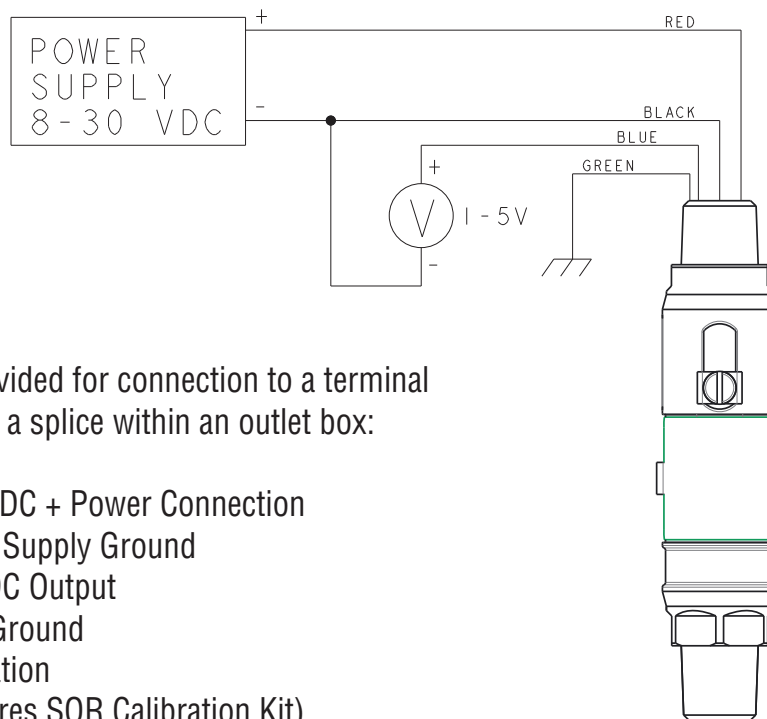

72" flying leads are provided for connection to a terminal strip within a cabinet or a splice within an outlet box:

Red (+)	8-30 VDC + Power Connection
Black (-)	Power Supply Ground
Blue	1-5 VDC Output
Green	Earth Ground
White	Calibration (Requires SOR Calibration Kit)
Brown	Not Used (trimmed at factory)
Bare	Drain Wire - Connected to Earth Ground (trimmed at factory)


NOTE: An external ground screw is included for additional earth ground connection.

Operation

Once the transmitter is installed and wired into a control or display loop, it is ready for use. Before applying power, check that the polarity and excitation voltage are correct.

Dimensions

*Dimensions are for reference only.
Contact the factory
for certified drawings
for a particular model number.*

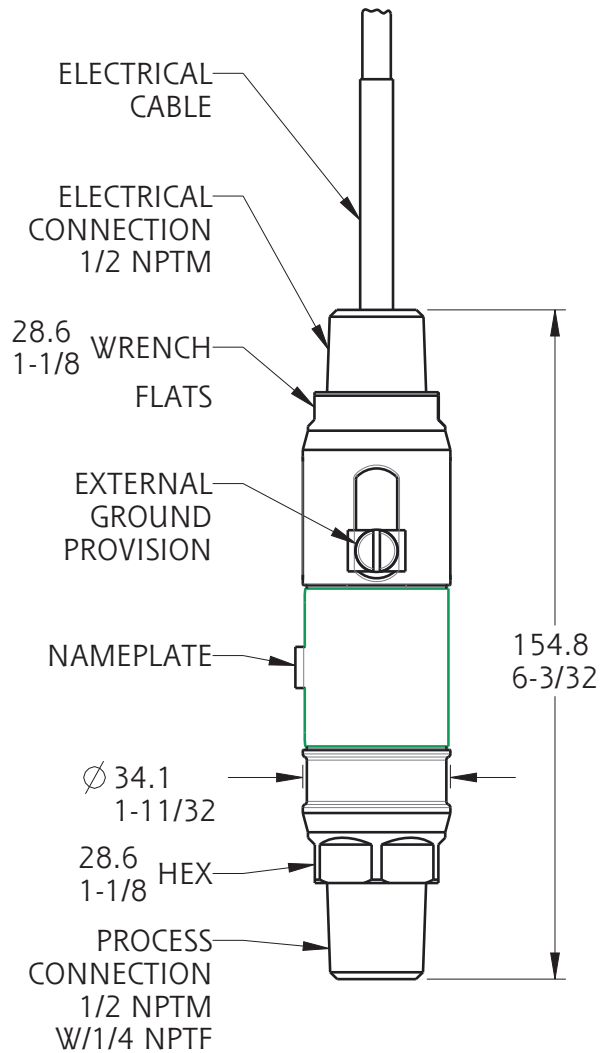

Linear = mm/inches

Drawing 0091438


Maintenance

The 805PT contains no user serviceable parts and cannot be repaired on site. It must be returned to the factory. Disassembly of the instrument by unauthorized persons will invalidate the warranty. If there is a risk of debris accumulating in the pressure port, it should be cleaned. Care and caution must be taken when cleaning the pressure port to prevent damage to the diaphragm.

ATEX/IECEX Marking Details

For ATEX/IECEX Certified Models

Drawing 0720524

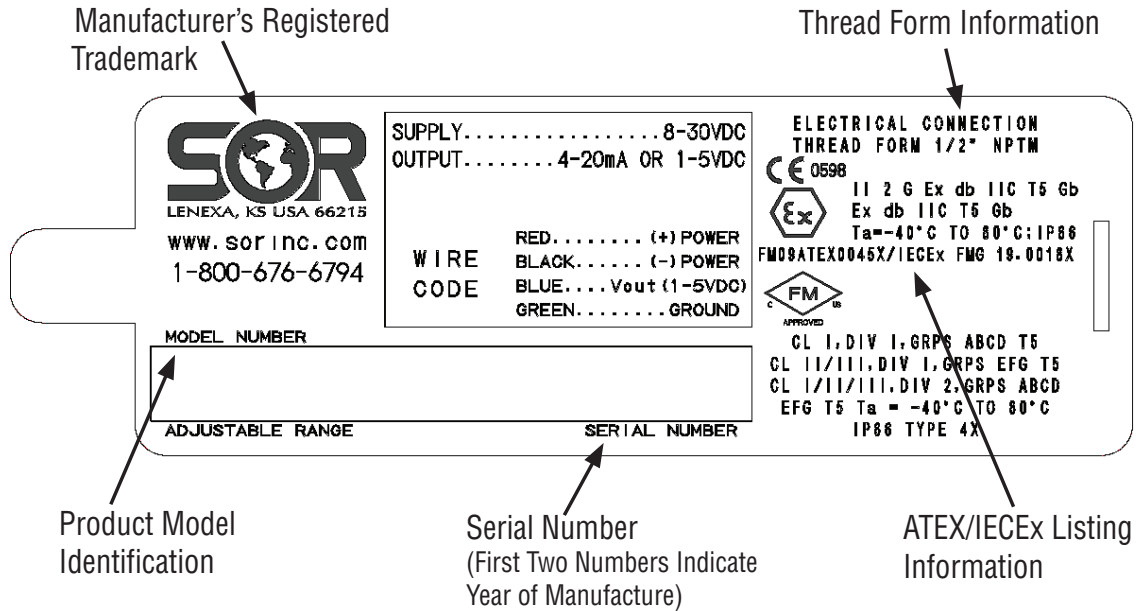



Special Condition for Safe Use

- Flamepath joints are not intended to be repaired

EU Declaration of Conformity



Product	800 Series Electronic Pressure Transmitters
Manufacturer Place of Issue	SOR Inc. 14685 West 105 th Street Lenexa, Kansas 66215-2003 United States of America
Date of Issue	June 18, 2020
We declare under our sole responsibility that the above products conform to the following specifications and directives	ATEX Directive (2014/34/EU) EN 60079-0:2018, EN 60079-1:2014, IEC 60079-0:2017 EN 60529:1991 + A1:2000 + A2:2013, IEC 60079-1:2014-06 EMC Directive (2004/108/EC) IEC 61326-1:2006, IEC 61000-4-2:2008 IEC 61000-4-3:2008, IEC 61000-4-4:2006 IEC 61000-4-5:2005, IEC 61000-4-6:2008 IEC 61000-4-8:2009
Carries the marking	 II 2 G Ex db IIC T5 Gb, Ta + -40°C to +80°C IP66
Reference documents	FM 09 ATEX 0045 Issued September 29, 2009 IECEx FMG 19.0018X Issued February 11, 2020 EMC Test Report 7914-623 Issued September 24, 2009
ATEX Notified Body	SGS Fimko Oy (Notified Body No. 0598) Takomotie 8 Helsinki, 00380 Finland
Person responsible	Michael J. Bequette (VP of Engineering)


Michael J. Bequette

Engineered to Order with Off-the-Shelf Speed



14685 West 105th Street, Lenexa, KS 66215-2003
913-888-2630 • 800-676-6794 USA • 913-888-0767 FAX

Form 1445 (06.20) SOR Inc.



14685 West 105th Street, Lenexa, KS 66215 ■ 913-888-2630 ■ 800-676-6794 USA ■ SORInc.com